

Paste the label here  
of your I-Perskin to  
communicate to us  
its serial number in the  
event of an after-sales  
service request



DOCUMENT TO KEEP

# RULES OF USE, MAINTENANCE INSTRUCTIONS AND WARRANTY

## RULES OF USE

To comply with the warranty conditions, the use of I-Perskin® requires compliance with the following rules:

1. The I-Perskin® is designed **exclusively for the practice of foot and/or fist combat sports, with suitable protective equipment**. Any other use would result in the cancellation of the warranty and could not engage the liability of I-Percut® SAS.

Always punch the I-Perskin® **with gloves suitable** for practicing combat sports. For blows with the feet, use only **soft sports shoes without metal or abrasive parts**.

2. **The I-Perskin® can only be used indoors**, in a dry environment and at a minimum distance of 2 meters from a heat source.
3. The I-Perskin® must be **installed exclusively on a punching bag**:
  - a. of the size corresponding to that of the I-Perskin®,
  - b. in shape and in good condition, lined uniformly over its entire volume, **allowing the sensors to all rest on a firm support**. A bag that is aging and deformed by use, for example, is therefore prohibited,
  - c. not having any metal part, fittings or repairs on the covering area.
4. **Autonomy of I-Perskin®**:
  - a. The I-Perskin® has an internal battery, which has an autonomy of 14 days for daily use of approximately 7 hours, and 8 days for daily use of 12 hours. It goes to sleep when not in use.
  - b. Charge the internal battery of the I-Perskin® using the powerbank (external battery) provided.
  - c. It is possible to use the I-Perskin® while charging, provided that the powerbank is stored in the pouch provided for this purpose.
  - d. Recharge the powerbank once the I-Perskin® has finished charging.
  - e. It is also possible to uninstall the I-Perskin® from the punching bag and plug it directly into a USB type A socket. Prefer to use the power bank .

5. **Storage and transportation :**

Always turn off, roll up and store the I-Perskin® in the carrying bag provided. Keep it away from humidity or heat sources and protect it from any possible shock.

6. If the I-Perskin® deteriorates, stop using it immediately and contact I-Percut® SAS.

## **MAINTENANCE INSTRUCTIONS**

- the I-Perskin® has an electronic system, it is **not washable**,
- Clean the I-Perskin® with a damp cloth or sponge,
- Do not use detergent,
- To disinfect it, use a waterless textile foam.

## **PARTS AND LABOR WARRANTY**

I-Percut® SAS guarantees I-Perskin® for a period of 2 years, or 24 months, the date of invoice being taken as proof.

This warranty covers parts (textile, sensors, etc.) and labor, and is valid within the framework of compliance with the rules of use and maintenance instructions above. It does not cover normal wear and tear of the product (normal aging of textiles, equipment).

Any use contrary to these rules and instructions, and any modification, repair, opening of the electronic system, dismantling, etc. whether carried out by the purchaser, one of its collaborators, one of its users or any other person, results in the immediate cancellation of the warranty.

In the event of an electronic breakdown or textile abrasion, I-Percut® SAS undertakes to repair the I-Perskin® or replace it. Replacement takes place only if the I-Perskin® is economically irreparable.

In the event of repair, I-Percut® SAS cannot commit to repair times. Deadlines are communicated to the customer as soon as the breakdown has been analyzed, depending on the availability of the parts necessary for the repair.

Once the warranty period has expired, repairs are possible upon estimate.

In accordance with the General Conditions of Sale of I- Percut® SAS:

The Seller is required to provide a warranty against hidden and apparent defects in the Product. The Professional Customer is protected in the event that the Product is affected by a defect in the production of the Product, existing on the date of receipt of the delivery and rendering the Product unsuitable for normal and foreseeable use.

The Seller guarantees its products against hidden defects, in accordance with the law, customs, case law, and under the following conditions:

- The warranty only applies to Products entirely manufactured by the Seller;
- The warranty only applies to Products which have duly become the property of the Buyer;
- The warranty is excluded if the Products have been used in unanticipated conditions of use or performance;
- The warranty is excluded when the defects and deterioration of the Product result from abnormal storage and/or conservation conditions of the Professional Customer, or are the fault of the Professional Customer.

Under these conditions, the Seller will replace or have repaired, at its option, the Products or parts concerned.

The Seller does not cover damage and wear resulting from a special adaptation or assembly, whether abnormal or not, of its Product unless it was carried out under its supervision. The warranty is limited to the replacement or repair of defective parts. The Product is guaranteed for twenty-four (24) months, the invoice date being taken as proof.

The Seller's warranty ceases automatically at the end of the period mentioned above. The warranty also automatically ceases if the Professional Customer does not notify the Seller of the alleged defect within twenty (20) working days of its discovery.