


 I-PERCUT®

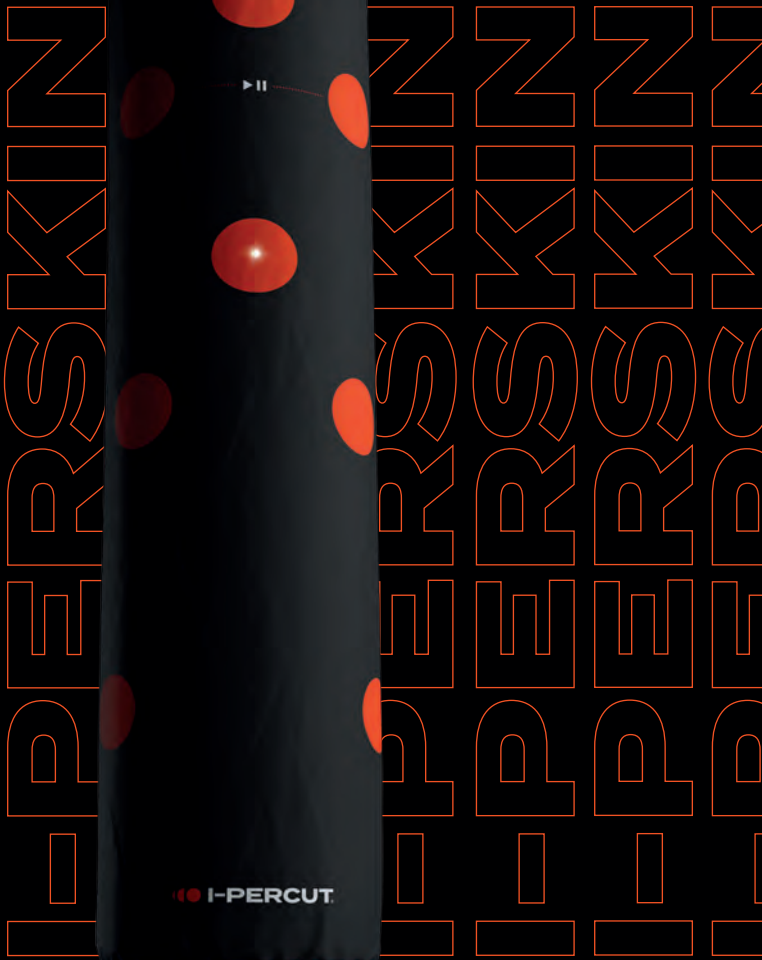

# GETTING STARTED MANUAL

[www.i-percut.com](http://www.i-percut.com)



**CONGRATULATIONS !**

**YOU HAVE JUST ACQUIRED AN I-PERSKIN.**

**WELCOME TO THE I-PERCUT TEAM.**

**1.**

## DOWNLOAD THE APP

Download the I-Percut application from the Store of your choice and let yourself be guided to enter **your activation key.**



**2.**

## INSTALL YOUR I-PERSKIN




Slip your I-Perskin on your punching bag and tighten the drawstring.

**3.**

## TURN IT ON

By pressing firmly on the central target, until the LEDs flash.

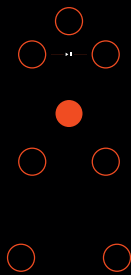

**LEGEND OF USE :**



The I-Perskin sends a signal to the user



User action is required

# 4.

## PAIR YOURSELF

### THE 2 TARGETS FOR PLAY/PAUSE PULSING IN ORANGE



Press these 2 targets at the same time to put the I-Perskin in pairing mode.



Your I-Perskin displays a random light code on 3 targets.

### TRIGGER THE SEARCH IN THE APP BY CLICKING THE ICON AT THE TOP RIGHT.



Reproduce the diagram that appears on the I-Perskin. Once your smartphone is paired, the icon turns green.



# 5.

## CALIBRATE AND PUNCH!

Follow the calibration instructions (necessary only for first use).

LET'S TRAIN!  
LET'S TRAIN!  
LET'S TRAIN!  
LET'S TRAIN!

# THE SIGNALS BRIGHT FROM THE I-PERSKIN

## THE 2 TARGETS FOR PLAY/PAUSE PULSING IN ORANGE?



The I-Perskin is on standby (or paused). To wake her up, press these 2 targets at the same time.



**Tip:** You are in the middle of a session and want to take a break? Press the 2 play/pause targets at the same time.

## THE CENTRAL TARGET PULSING IN ORANGE?



The I-Perskin is waiting for a program. You must send it your instructions in the mobile application.




## ALL TARGETS PULSING RED?



The internal battery is too low. It must be recharged with the powerbank (external battery) using the USB cable found in the back pocket of the I-Perskin.



Charging takes 4 hours and you can use the I-Perskin while charging. Remember to recharge the powerbank regularly!



## YOUR I-PERSKIN DOES NOT RESPOND?

To reboot the I-Perskin, you must press and hold for a long time (8 seconds) on the target representing the liver.

All targets will glow orange once the reboot is complete.




## END OF USE AND STORAGE

### TURN OFF THE I-PERSKIN

Before turning off the I-Perskin, it is necessary to unpair via the application.

To turn it off, firmly press the central target until the LEDs turn orange and turn off.

The I-Perskin is off.

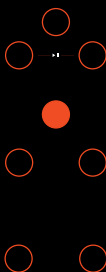

### STORE THE I-PERSKIN

Loosen the cord, slide the I-Perskin taking care not to pull on the cables. You can help it by pulling the bottom of the I-Perskin.

Roll it up, taking care not to bend the sensors, and store the I-Perskin in its bag. Store it away from humidity and from heat sources, and protect it from any possible shock (when it is not on your punching bag).



# RULES OF THE GAME

## USAGE TIPS

Although the textile is resistant to abrasion, to avoid deterioration, always punch the I-Perskin with boxing gloves.

For blows with the feet, only use sports shoes without metal or abrasive parts.

To make recharging the I-Perskin easier, prefer to use the external battery provided.

## MAINTENANCE TIPS

I-Perskin is not washable.

To clean it, use a damp cloth or sponge.

Do not use detergent.

To disinfect it, use a dry cleaner or fabric foam without water.

## Warranty

Find the warranty conditions and all related information in the document "Rules of use, maintenance and warranty instructions".

# SIMPLIFY YOURSELF THE LIFE !

**DEMO VIDEO**



**WEBSITE FAQ**

**WRITE TO after-sales service**



**CALL I-PERCUT**

## JOIN THE I-PERCUT COMMUNITY!

Every day we look for new ways to inspire our community and make the sport they love more engaging and fun.

**FOLLOW OUR NEWS  
AND SHARE YOUR  
EXPERIENCE.**



Manufacturer:

**I-PERCUT SAS**

**D-U-N-S Number:** 277 637 734

**Email:** [contact@i-percut.com](mailto:contact@i-percut.com)

**Phone :** +335 31 60 20 29

**Website :** [www.i-percut.com](http://www.i-percut.com)

